

INSTRUCTIONAL GUIDE

BLUETOOTH SMART POINTER

SETUP

Bluetooth Pairing


Before using the Bluetooth Smart Pointer, you must pair it to a compatible device (iOS, Mac / PC, Android*). Turn Bluetooth on in your device, then slide the Smart Pointer's keypad guard down and press and hold the Bluetooth button. Select the Smart Pointer from your device's Bluetooth list; you will be asked to enter a PIN code on the Smart Pointer's keypad. Do so, then press the lower-right "enter" button on the keypad.

VoiceOver for iOS Accessibility Mode


When using the Smart Pointer in "Accessibility Mode" with iOS devices, you must have "VoiceOver" turned on (in your iOS device). To do this, in your device go to "Settings" then "General" then "Accessibility" then scroll down and select "Triple-click Home" and choose "VoiceOver." Triple-clicking the home button on the iOS device will now toggle VoiceOver on / off .

MODES


Presentation Mode

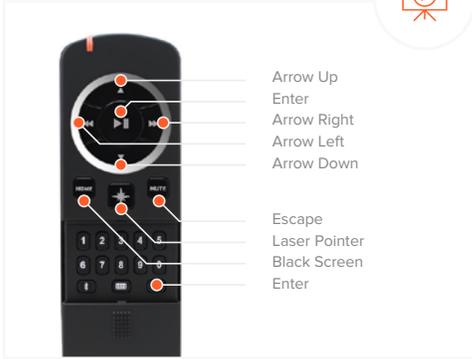

Multimedia Mode

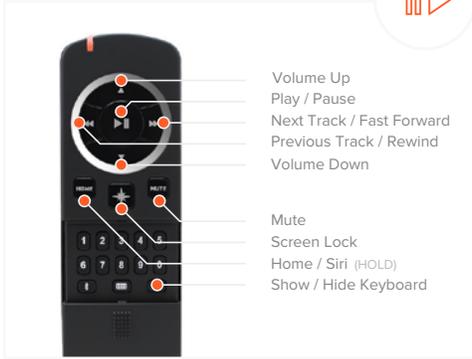

Accessibility Mode

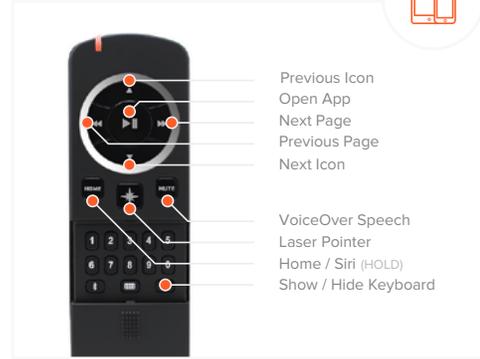

DEVICES

iOS Devices

The Smart Pointer can be used with iOS devices in Multimedia Mode, Presentation Mode and Accessibility Mode.

Multimedia Mode

Up Arrow:	Volume Up
	Take Picture
Down Arrow:	Volume Down
Side Arrows:	HOLD FF / Rewind
	Skip Tracks
Center Button:	Play / Pause
Home:	HOLD Siri
	Home Screen
Laser:	Lock Screen
Mute:	Mute Device

Presentation Mode

Side Arrows:	Navigate Slides
Center Button:	Select
Home:	Black Screen
Laser:	Laser Pointer
Mute:	End SlideShow

Accessibility Mode

Mode Up Arrow:	Scroll Apps
Down Arrow:	Scroll Apps
Side Arrows:	Scroll Pages
Center Button:	Select
Home:	HOLD Siri
	Home Screen
Laser:	Laser Pointer
Mute:	Mute VoiceOver

Mac / PCs:

The Smart Pointer can be used with Macs and PCs devices in Multimedia Mode and Presentation Mode.

Multimedia Mode

Up Arrow:	Volume Up
Down Arrow:	Volume Down
Side Arrows:	HOLD FF / Rewind
	Skip Tracks
Center Button:	Play / Pause
Mute:	Mute Device

Presentation Mode

Side Arrows:	Navigate Slides
Center Button:	Select
Home:	Black Screen
Laser:	Laser Pointer
Mute:	End SlideShow

Android Devices:

The Smart Pointer can be used with Android* devices in Multimedia Mode and Presentation Mode.

Multimedia Mode

Up Arrow:	Volume Up
Down Arrow:	Volume Down
Side Arrows:	HOLD FF / Rewind
	Skip Tracks
Center Button:	Play / Pause
Home:	Home Screen
Laser:	Lock Screen
Mute:	Mute Device

Presentation Mode

Side Arrows:	Navigate UI
Center Button:	Select
	Take Picture
Mute:	Back one Screen

**Certain Android apps and devices may not be fully compatible with all Smart Pointer features. Some Android devices may have the native keyboard disabled when using the Smart Pointer*