

Dimensions: 99 x 83 mm

OUTSIDE

NEED HELP?
 BESOIN D'AIDE ? | ¿NECESITA AYUDA? | BENÖTIGEN SIE HILFE? | HAI BISOGNO DI AIUTO? | PRECISA DE AJUDA? | YARDIMA MI İHTİYACINIZ VAR? | 助けが必要ですか?

Manufacturer:
 7365 Mission Gorge Rd. Ste. G
 San Diego, CA 92120, USA
 +1 858 268 1800
 support@satechi.com
 www.satechi.net

EU Authorized Representative:
 Chemical Inspection and Regulation Service Limited
 CIRS, Regus Harcourt Centre
 Dublin, Ireland, D02 HW77
 +353 1 477 3710

UK Representative:
 Chemical Inspection and Regulation Service UK Ltd.
 Unit 536, Salisbury House
 London Wall, London, EC2M 5SQ
 +44 20 3289 6395

ST-KULX3(x)-EN_LX3_WKeyboard_UM_RevA

HOT KEY FUNCTION AND SUPPORT TABLE

FUNCTION DES TOUCHES RAPIDES ET TABLEAU DE SUPPORT | FUNCIÓN DE TECLAS RÁPIDAS Y TABLA DE SOPORTE | FUNKTIONSTABELLE FÜR HOTKEYS UND UNTERSTÜTZUNG | FUNZIONE TASTI RAPIDI E TABELLA DI SUPPORTO | FUNÇÃO DAS TECLAS DE ATALHO E TABELA DE SUPORTE | HIZLI TUŞ FONKSİYONU VE DESTEK TABLOSU | ホットキー機能とサポート表

• The key function is based on the OS selected via the MAC/WIN switch. For buttons F1 - F13 press Fn + Esc to enable the function.

La fonction des touches dépend du système d'exploitation sélectionné via l'interrupteur MAC/WIN. Pour activer la fonction des touches F1 à F13, appuyez sur Fn + Echap. | La función de las teclas se basa en el sistema operativo seleccionado mediante el interruptor MAC/WIN. Para activar la función de las teclas F1 a F13, pulsar Fn + Esc. | Die Tastenfunktion basiert auf dem über den MAC/WIN-Schalter ausgewählten Betriebssystem. Um die Funktion der Tasten F1 bis F13 zu aktivieren, Fn + Esc drücken. | La funzione dei tasti si basa sul sistema operativo selezionato tramite l'interruttore MAC/WIN. Per attivare la funzione dei tasti da F1 a F13, premere Fn + Esc. | A função das teclas baseia-se no sistema operativo selecionado através do interruptor MAC/WIN. Para ativar a função das teclas F1 a F13, pressione Fn + Esc. | Tuş işlevi, MAC/WIN anahtarıyla seçilen işletim sistemine bağlıdır. F1 - F13 tuşlarının işlevini etkinleştirmek için Fn + Esc tuşlarına basın. | Кіеі функція є, MAC/WIN свитча з вибраної ОС. ґрунтується на F1~F13 кіеі, Fn + Esc кешіть функцію ефективно.

MAC	WINDOWS
<p>Decrease Display Brightness Diminuer la luminosité de l'écran Disminuir el brillo de la pantalla Bildschirmhelligkeit verringern Diminuire la luminosità dello schermo Diminuir o brilho do ecrã Ekran parlaklığını azalt 画面的明るさを下げる</p>	<p>Increase Display Brightness Augmenter la luminosité de l'écran Aumentar el brillo de la pantalla Bildschirmhelligkeit erhöhen Aumentare la luminosità dello schermo Aumentar o brilho do ecrã Ekran parlaklığını artır 画面的明るさを上げる</p>
<p>Mission Center Centre de contrôle Centro de control Missionszentrale Centro di controllo Centro de controle Görev Merkezi ミッションコントロール</p>	<p>Task View Vue des tâches Vista de tareas Aufgabensicht Vista attività Vista de tarefas Görev Görünümü タスクビュー</p>
<p>Spotlight Search - App Recherche Spotlight - Appli Búsqueda Spotlight - App Spotlight-Suche - App Ricerca Spotlight - App Pesquisa Spotlight - App Spotlight Arama - Uygulama Spotlight検索 - アプリ</p>	<p>App Switcher Sélecteur d'applications Selector de aplicaciones App-Umschalter Selettore app Seletor de aplicações Uygulama Değiştirici アプリスイッチャー</p>
<p>Spotlight Search Recherche Spotlight Búsqueda Spotlight Spotlight-Suche Ricerca Spotlight Pesquisa Spotlight Spotlight Arama Spotlight検索</p>	<p>Windows Search Recherche Windows Búsqueda de Windows Windows-Suche Ricerca Windows Pesquisa Windows Windows Arama Windows検索</p>

MAC	WINDOWS
<p>Dictation Diction Dictado Diktat Dettatura Ditado Dikte 音声入力</p>	<p>Do Not Disturb Ne pas déranger No molestar Nicht stören Non disturbare Não incomodar Rahatsız etme おやすみモード</p>
<p>Previous Track Piste précédente Pista anterior Vorheriger Titel Traccia precedente Faixa anterior Önceki parça 前のトラック</p>	<p>Play / Pause Lecture / Pause Reproducir / Pausar Wiedergabe / Pause Riproduci / Pausa Reproduzir / Pausar Oynat / Duraklat 再生 / 一時停止</p>
<p>Next Track Piste suivante Pista siguiente Nächster Titel Traccia successiva Faixa seguinte Sonraki parça 次のトラック</p>	<p>Single Press Esc / Fn + Lock Fn Keys Appui simple Echap / Fn + Verrouiller touches Fn Pulsar una vez Esc / Fn + Bloquear teclas Fn Einmaliges Drücken von Esc / Fn + Sperre Fn-Tasten Premere una volta Esc / Fn + Blocca tasti Fn Pressione única Esc / Fn + Bloquear teclas Fn Tek basış Esc / Fn + Fn tuşlarını kilitle 単押し Esc / Fn + Fnキーのロック</p>
<p>Mute Muet Silenciar Stummschalten Muto Silenciar Sessize al ミュート</p>	<p>Volume Down Baisser le volume Bajar volumen Lautstärke verringern Abbassare il volume Diminuir o volume Sesi azalt 音量を下げる</p>
<p>Volume Up Augmenter le volume Subir volumen Lautstärke erhöhen Alzare il volume Aumentar o volume Sesi artır 音量を上げる</p>	

MAC	WINDOWS
<p>Emoji Emoji Emoji Emoji Emoji Emoji 絵文字</p>	<p>N/A Sans objet No aplica Nicht zutreffend Non applicabile Não aplicável Geçerli değil 該当なし</p>
<p>Screen Lock Verrouillage de l'écran Bloqueo de pantalla Bildschirmsperre Blocco schermo Bloqueo de ecrã Ekran Kilidi 画面ロック</p>	


FCC Statement
 This device complies with part 15 of the FCC results. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

CE DECLARATION OF CONFORMITY
 Satechi declares that this product is in compliance with the essential requirements and other relevant provisions of applicable EC directives. For Europe, a copy of the Declaration of Conformity for this product may be obtained by visiting <https://satechi.net/support/doc>

WEEE Information
 According to the WEEE (Waste Electrical and Electronic Equipment) Directive, do not dispose of this product as household waste or commercial waste. Waste electrical and electronic equipment should be appropriately collected and recycled as required by practices established for your country. For information on recycling of this product, please contact your local authorities, your household waste disposal service, or the shop where you purchased the product.

CAN ICES(B)/NMB(B)
 This Class B digital apparatus complies with Canadian ICES(B). (Cet appareil numérique de la Classe B conforme à la norme NMB(B) du Canada).

AUSTRALIAN CONSUMER LAW
 Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

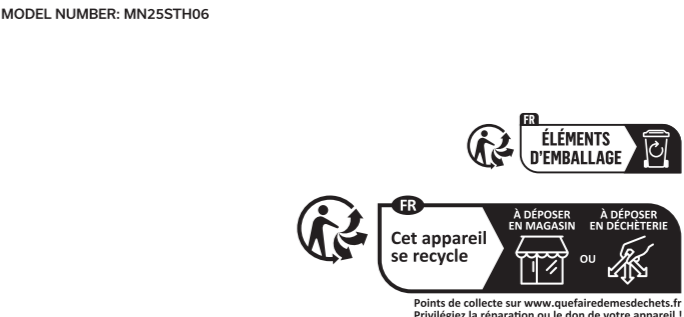

SATECHI

SLIM LX3 WIRED KEYBOARD

USER MANUAL
 Manuel de l'utilisateur | Manual de usuario | Benutzerhandbuch | Manuale utente | Manual de usuário | Kullanım kılavuzu | ユーザーマニュアル


INSIDE

PLUG & PLAY
 CONNECTER ET UTILISER | CONEXIÓN Y USO | ANSCHLIEßEN UND VERWENDEN | COLLEGARE E USARE | LIGAR E USAR | BAĞLA VE KULLAN | 接続して使用する

• Plug into USB-C or USB-A port and the keyboard will be detected by the device.
 Branchez dans le port USB-C ou USB-A et le clavier sera détecté par l'appareil.
 Conectar al puerto USB-C o USB-A y el dispositivo detectará el teclado.
 In den USB-C- oder USB-A-Anschluss stecken, und die Tastatur wird vom Gerät erkannt.
 Collegare alla porta USB-C o USB-A e il dispositivo rileverà la tastiera.
 Ligar a porta USB-C ou USB-A e o dispositivo irá detetar o teclado.
 USB-C veya USB-A bağlantı noktasına takın, klavye cihaz tarafından algılanacaktır.
 USB-CまたはUSB-Aポートに接続すると、キーボードがデバイスに検出されます。

FUNCTIONS

FONCTIONS | FUNCIONES | FUNKTIONEN | FUNZIONI | FUNÇÕES | FONKSİYONLAR | 機能

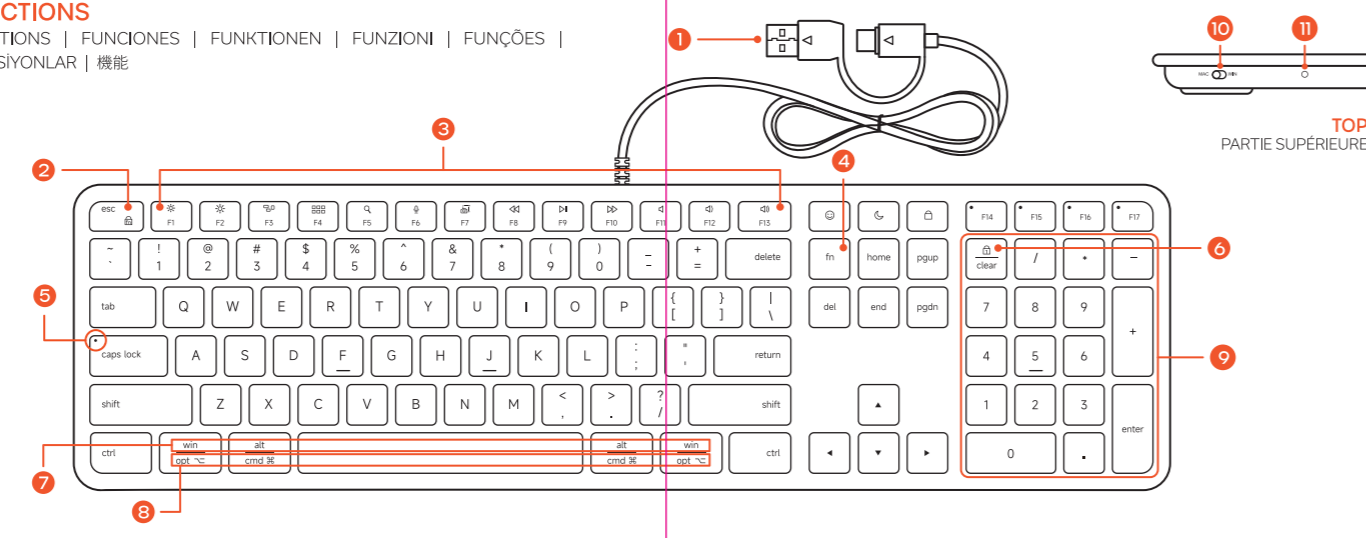

- 1. USB-C Connector with USB-C to USB-A Adapter**
 Connecteur USB-C avec adaptateur USB-C vers USB-A | Conector USB-C con adaptador USB-C a USB-A | USB-C-Anschluss mit USB-C-zu-USB-A-Adapter | Connettore USB-C con adattatore da USB-C a USB-A | Conector USB-C con adaptador USB-C para USB-A | USB-C Bağlayıcı ve USB-C'den USB-A'ya Adaptör | USB-Cコネクタ (USB-CからUSB-Aへのアダプター付き)
- 2. Function Lock**
 Verrouillage des fonctions | Bloqueo de función | Funktionssperre | Blocco funzione | Fonksiyon Kilidi | ファンクションロック
- 3. Media / Functions Keys**
 Touches multimédia / fonctions | Teclas multimedia / funciones | Multimedia-/ Funktionstasten | Tasti multimedia / funzione | Medya / Fonksiyon Tuşları | メディア/ファンクションキー
- 4. Fn Key**
 Touche Fn | Tecla Fn | Fn-Taste | Tasto Fn | Fn Tuşu | Fnキー
- 5. Caps Lock LED Indicator**
 Voyant de verrouillage des majuscules | Indicador LED de bloqueo de mayúsculas | Feststelltaste LED-Anzeige | Indicator LED Bloc Maiusc | Büyük Harf Kilidi LED Göstergesi | キャプスロックLEDインジケータ
- 6. Num Lock Key**
 Touche Verr Num | Tecla de bloqueo numérico | Num-Taste | Tasto Bloc Num | Sayı Kilidi Tuşu | Numロックキー
- 7. WIN Modifier Keys (switch in WIN mode)**
 Touches modificateurs WIN (activation du mode WIN) | Teclas modificadoras WIN (modo WIN activado) | WIN-Modifikatortasten (im WIN-Modus) | Tasti modificatori WIN (modalità WIN attivata) | Teclas modificadoras WIN (modo WIN ativado) | WIN Modifiye Tuşları (WIN modunda geçiş) | WIN 修飾キー (WIN-モード切替)
- 8. MAC Modifier Keys (switch in MAC mode)**
 Touches modificateurs MAC (activation du mode MAC) | Teclas modificadoras MAC (modo MAC activado) | MAC-Modifikatortasten (im MAC-Modus) | Tasti modificatori MAC (modalità MAC attivata) | Teclas modificadoras MAC (modo MAC ativado) | MAC Modifiye Tuşları (MAC modunda geçiş) | MAC 修飾キー (MAC-モード切替)
- 9. Numeric Pad**
 Pavé numérique | Teclado numérico | Nummemblock | Tastierino numerico | Teclado numérico | Sayısal Tuş Takımı | テンキー
- 10. MAC / WIN Switch**
 Interrupteur MAC / WIN | Interruptor MAC / WIN | MAC / WIN-Schalter | Interruttore MAC / WIN | Interruptor MAC / WIN | MAC / WIN Anahtar | MAC / WIN Switch
- 11. Power / Charging LED**
 Voyant d'alimentation / de charge | LED de encendido / carga | Strom- / Lade-LED | LED di alimentazione / ricarica | LED de energia / carregamento | Güç / Şarj LED'i | 電源/充電LED

- 10. MAC / WIN Switch**
 Interrupteur MAC / WIN | Interruptor MAC / WIN | MAC / WIN-Schalter | Interruttore MAC / WIN | Interruptor MAC / WIN | MAC / WIN Anahtar | MAC / WIN Switch
 - 11. Power / Charging LED**
 Voyant d'alimentation / de charge | LED de encendido / carga | Strom- / Lade-LED | LED di alimentazione / ricarica | LED de energia / carregamento | Güç / Şarj LED'i | 電源/充電LED
- LED INDICATORS**
 TÊMOIN LED | INDICADORES LED | LED-ANZEIGEN | INDICATORI LED | INDICADORES LED | LED GÖSTERGELERİ | LED-インジケータ
- **ON/OFF – turns green for 3 seconds and turns off.**
 MARCHE/ARRÊT – devient vert pendant 3 secondes puis s'éteint.
 ENCENDIDO/APAGADO – se enciende en verde durante 3 segundos y luego se apaga.
 EIN/AUS – leuchtet 3 Sekunden lang grün und schaltet sich dann aus.
 ACCESSO/SPENTO – si accende in verde per 3 secondi e poi si spegne.
 LIGADO/DESLIGADO – 3 saniye yeşil yanar ve sonra kapanır.
 オン/オフ – 3秒間緑色に点灯し、その後消灯します。

• **Caps Lock – White LED turns on when Caps Lock is enabled.**
 Verr Num – Le témoin blanc s'allume lorsque le verrouillage des majuscules est activé.
 Bloqueo de mayúsculas – El LED blanco se enciende cuando el bloqueo de mayúsculas está activado.
 Feststelltaste – Die weiße LED leuchtet, wenn die Feststelltaste aktiviert ist.
 Bloc Maiusc – Il LED bianco si accende quando il blocco maiuscole è attivo.
 Bloqueio de Caps Lock – O LED branco acende-se quando o Caps Lock está ativado.
 Caps Lock – Beyaz LED, Caps Lock etkinleştirildiğinde yanar.
 キャプスロック – Caps Lockが有効になると白色LEDが点灯します。

DIGITAL MANUAL
 TIẾNG VIỆT | ΕΛΛΗΝΙΚΑ | SVENSKA | DANSK | SUOMI | ČESTINA | POLSKI | BAHASA MELAYU

• For more languages, please scan the QR code
 Để biết thêm ngôn ngữ, quét mã QR
 Για περισσότερες γλώσσες, παρακαλώ σαρώστε τον κωδικό QR
 För fler språk, skanna QR-koden
 For flere sprog, scan QR-koden
 Lisäkielille skanna QR-koodi
 Pro více jazyků naskenujte QR kód
 Aby uzyskać więcej języków, zeskanuj kod QR
 Untuk lebih banyak bahasa, imbas kod QR