

Dimension: 75 x 135 mm

OUTSIDE

IMPORTANT

 
IMPORTANT | IMPORTANTE | WICHTIG | IMPORTANTE | ÖNEMLİ
| WAŻNY | IMPORTANTE | ВАЖНО | 重要 | 중요한 | 重要訊息 | 重要信息

- Connected USB devices should not exceed an input current of 900mA.
- Les périphériques USB connectés ne doivent pas dépasser un courant d'entrée de 900 mA.
- Los dispositivos USB conectados no deben superar una corriente de entrada de 900 mA.
- Angeschlossene USB-Geräte sollten einen Eingangsstrom von 900mA nicht überschreiten.
- I dispositivi USB collegati non devono superare una corrente di ingresso di 900 mA.
- Bağlı USB cihazları 900mA giriş akımını aşmamalıdır.
- Podłączone urządzenia USB nie powinny przekraczać prądu wejściowego 900mA.
- Os dispositivos USB conectados não devem exceder uma corrente de entrada de 900mA.
- Входной ток подключенных USB-устройств не должен превышать 900 mA.
- 接続された USB デバイスは、900mA の入力電流を超えてはなりません。
- 연결된 USB 장치는 900mA의 입력 전류를 초과하지 않아야 합니다.
- 連接的 USB 設備不應超過 900mA 的輸入電流。
- 连接的 USB 设备不应超过 900mA 的输入电流。

- Safely eject data storage devices prior to disconnecting adapter.
- Éjectez en toute sécurité les périphériques de stockage de données avant de déconnecter l'adaptateur.
- Expulse de forma segura los dispositivos de almacenamiento de datos antes de desconectar el adaptador.
- Werfen Sie Datenspeichergeräte sicher aus, bevor Sie den Adapter trennen.
- Espellere in modo sicuro i dispositivi di archiviazione dei dati prima di scollegare l'adattatore.

- Adaptörün bağlantısını kesmeden önce veri depolama cihazlarını güvenli bir şekilde çıkarın.
- Przed odłączeniem adaptera należy bezpiecznie wysunąć urządzenia do przechowywania danych.
- Ejete com segurança os dispositivos de armazenamento de dados antes de desconectar o adaptador.
- Перед отсоединением адаптера безопасно извлеките устройства хранения данных.
- アダプタを取り外す前に、データ ストレージ デバイスを安全に取り出します。
- 어댑터를 분리하기 전에 데이터 저장 장치를 안전하게 꺼냅니다.
- 在斷開適配器之前安全地彈出數據存儲設備。
- 在断开适配器之前安全地弹出数据存储设备。

- The MicroSD card should be inserted with its pins facing down, and the SD card with its pins facing up.
- La carte MicroSD doit être insérée avec ses broches vers le bas et la carte SD avec ses broches vers le haut.
- La tarjeta MicroSD debe insertarse con los pines hacia abajo y la tarjeta SD con los pines hacia arriba.
- Die MicroSD-Karte sollte mit den Stiften nach unten und die SD-Karte mit den Stiften nach oben eingesetzt werden.
- La scheda MicroSD deve essere inserita con i pin rivolti verso il basso e la scheda SD con i pin rivolti verso l'alto.
- MicroSD kart pimleri aşağı bakacak şekilde ve SD kart pimleri yukarı bakacak şekilde takılmalıdır.
- Karta MicroSD powinna być włożona stykami do dołu, a karta SD stykami do góry.
- O cartão MicroSD deve ser inserido com os pinos voltados para baixo e o cartão SD com os pinos voltados para cima.
- Карта MicroSD должна быть вставлена контактами вниз, а SD-карта — контактами вверх.
- MicroSD カードはピンを下に向けて挿入し、SD カードはピンを上に向けて挿入する必要があります。
- MicroSD 카드는 핀이 아래를 향하고 SD 카드는 핀이 위를 향하도록 삽입해야 합니다.
- 插入 MicroSD 卡時針腳朝下，插入 SD 卡時針腳朝上。
- 插入 MicroSD 卡时针脚朝下，插入 SD 卡时针脚朝上。

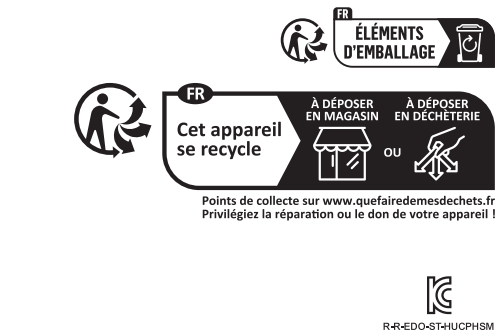

NEED HELP?

BESOIN D'AIDE? | ¿NECESITA AYUDA? | BENÖTIGEN SIE HILFE? |
HAI BISOGNO DI AIUTO? | YARDIMA MI İHTİYACINIZ VAR? |
POTRZEBUJĘ POMOCY? | PRECISA DE AJUDA? | НУЖНА ПОМОЩЬ?
| 助けが必要ですか? | 도움이 필요하십니까? | 需要幫助? | 需要帮助?

Manufacturer:
7365 Mission Gorge Rd. Ste. G
San Diego, CA 92120, USA
+1 858 268 1800
support@satechi.com
www.satechi.net

EU Authorized Representative:
Chemical Inspection and Regulation
Service Limited
CIRS, Regus Harcourt Centre
Dublin, Ireland, D02 HW77
+353 1 477 3710

UK Representative:
Chemical Inspection and Regulation
Service UK Ltd.
Unit 536, Salisbury House
London Wall, London, EC2M 5SQ
+44 20 3289 6395

S A T E C H I

USB-C PRO HUB
SLIM ADAPTER

USER MANUAL




Manuel de l'utilisateur | Manual de usuario |
Benutzerhandbuch | Manuale utente | Kullanım
kılavuzu | Instrukcja obsługi | Manual de usuário |
Руководство пользователя | ユーザーマニュアル |
사용자 매뉴얼 | 使用者説明 | 用户说明

INSIDE

PLUG & PLAY

BRANCHEZ & JOUEZ | CONECTAR Y USAR | STECKEN & SPIELEN |
COLLEGARE E GIOCARE | TAK VE ÇALIŞTIR | PODŁĄCZ I UŻYWAJ |
CONECTE E USE | ПОДКЛЮЧИ И РАБОТАЙ | プラグ&プレイ |
플러그 앤 플레이 | 即插即用 | 即插即用

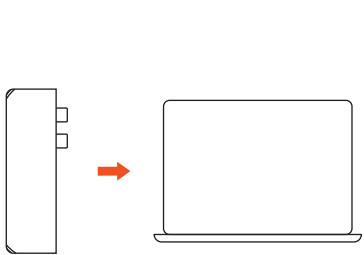 

1. Connect to a laptop


Connectez-vous à un ordinateur portable | Conecte a una computadora portátil | Mit einem Laptop verbinden | Collega a un laptop | Bir dizüstü bilgisayara bağlanın | Połączenie z laptopem | Conecte-se a um laptop | Подключение к ноутбуку | ノートパソコンに接続 | 노트북에 연결 | 连接到筆記型電腦 | 连接到笔记本电脑

2. Connect your devices

Connectez vos appareils | Conecte sus dispositivos | Schließen Sie Ihre Geräte an | Collega i tuoi dispositivi | Cihazlarınızı bağlayın | Podłącz swoje urządzenia | Conecte seus dispositivos | Подключите свои устройства | お使いのデバイスを接続 | 기기 연결 | 连接到您的裝置 | 连接到您的设备

FUNCTIONS

FONCTIONS | FUNCIONES | FUNKTIONEN | FUNZIONI | FONKSİYONLAR
| FUNKCJE | FUNÇÕES | ФУНКЦИИ | 機能 | 기능 | 功能 | 功能

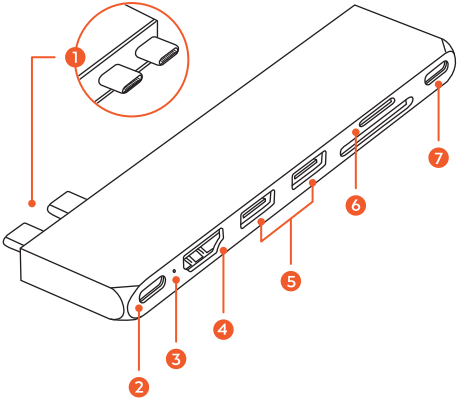 

1. Dual USB-C Connectors

Connecteurs USB-C doubles | Conectores duales USB-C | Doppelte USB-C-Anschlüsse | Doppi connettori USB-C | Çift USB-C Konnektörleri | Dwa złącza USB-C | Conectores USB-C duplos | Двойные разъемы USB-C | 듀얼 USB-C 코넥터 | 雙 USB-C 連接器 | 双 USB-C 连接器

2. USB4 Pass-Through Port (40Gbps) (100W PD) (6K/60Hz)

Port de passage USB4 | Puerto de transferencia USB4 | USB4-Pass-Through-Port | Porta passante USB4 | USB4 Geçiş Portu |

Port przelotowy USB4 | Porta de passagem USB4 | Сквозной порт USB4 | USB4 バススルー ポート | USB4 통과 포트 | USB4 直通端口 | USB4 直通端口

3. LED Indicator

Indicateur LED | Indicador LED | LED-Anzeige | Indicatore LED | LED Göstergesi | Wskaźnik LED | Indicador LED | Светодиодный Индикатор | LED 논지케타 | LED 표시등 | LED指示燈 | LED指示灯

4. HDMI Video Port (4K@60Hz)

Port vidéo HDMI | Puerto de video HDMI | HDMI-Video-Anschluss | Porta video HDMI | HDMI Video Portu | Port video HDMI | Porta de video HDMI | Порт видео HDMI | HDMIビデオポート | HDMI 비디오 포트 | HDMI 視訊連接埠 | HDMI 视频端口

5. 2X USB-A Data Ports (10Gbps)

Ports de données USB-A | Puertos de datos USB-A | USB-A Datenanschlüsse | Porte dati USB-A | USB-A Data Portları | Porty danych USB-A | Portas de dados USB-A | Порты передачи данных USB-A | USB-A 데이터포트 | USB-A 데이터 포트 | USB-A 資料連接埠 | USB-A 数据端口

6. SD & Micro SD Card Slots (UHS-I)

Emplacements pour cartes SD et micro SD | Ranuras para tarjetas SD y Micro SD | SD- und Micro-SD-Kartenschlitze | Slot per schede SD e micro SD | SD ve Mikro SD Kart Yuvaları | Gniazda kart SD i Micro SD | Slots para cartão SD e Micro SD | Слоты для карт SD и Micro SD | SD と Micro SD 카드로스롯 | SD 및 마이크로 SD 카드 슬롯 | SD 和 Micro SD 卡插槽 | SD 和 Micro SD 卡插槽

7. USB-C Data Port (10Gbps)

Port de données USB-C | Puerto de datos USB-C | USB-C-Datenanschluss | Porta dati USB-C | USB-C Data Portu | Port danych USB-C | Porta de dados USB-C | Порт передачи данных USB-C | USB-C 데이터포트 | USB-C 데이터 포트 | USB-C 資料連接埠 | USB-C 数据端口



This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.
Note: This Equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
1.1. Reorient or relocate the receiving antenna
1.2. Increase the separation between the equipment and receiver
1.3. Connect the equipment into and outlet on a circuit different from that to which the receiver is connected
1.4. Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.



Satechi declares that this product is in compliance with the essential requirements and other relevant provisions of applicable EC directives. For Europe, a copy of the Declaration of Conformity for this product may be obtained by visiting <https://satechi.net/support/doc>



According to the WEEE (Waste Electrical and Electronic Equipment) Directive, do not dispose of this product as household waste or commercial waste. Waste electrical and electronic equipment should be appropriately collected and recycled as required by practices established for your country. For information on recycling of this product, please contact your local authorities, your household waste disposal service, or the shop where you purchased the product.

CAN ICES-003 (B)/NMB-003(B)
This Class B digital apparatus complies with Canadian ICES-003.
(Cet appareil numérique de la Classe B conforme à la norme NMB-003 du Canada).

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.
You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.