


ECO HARDSHELL CASE FOR MACBOOK AIR M2

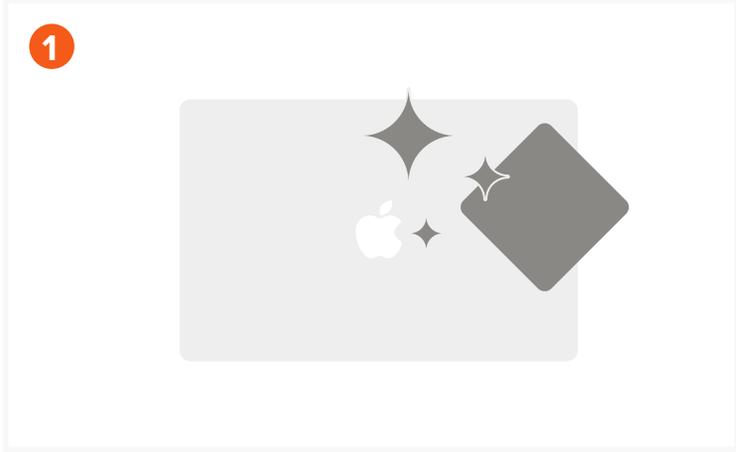

1
Before installing the Eco Hardshell Case, please properly clean your computer.




2
When installing the top case, ensure all **6 clips** snap into place.




3
If installed correctly, the logo should be on the bottom right.



4
When installing the bottom case, ensure all **7 clips** snap into place.

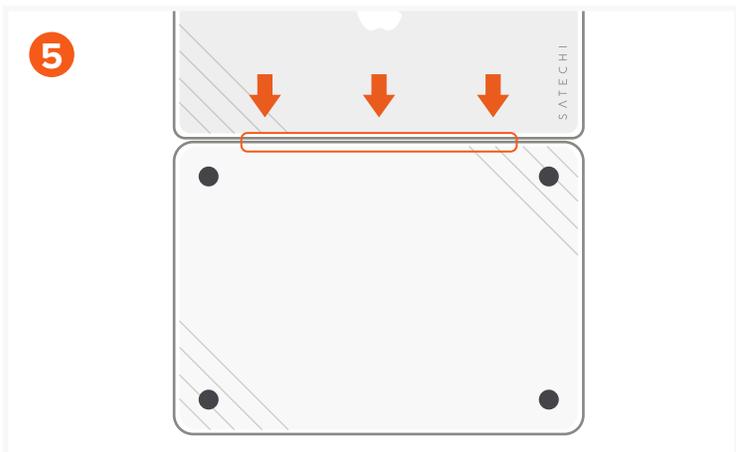

5
Ensure this long clip snaps into place as well. If it does not snap into place, the case will fall off.

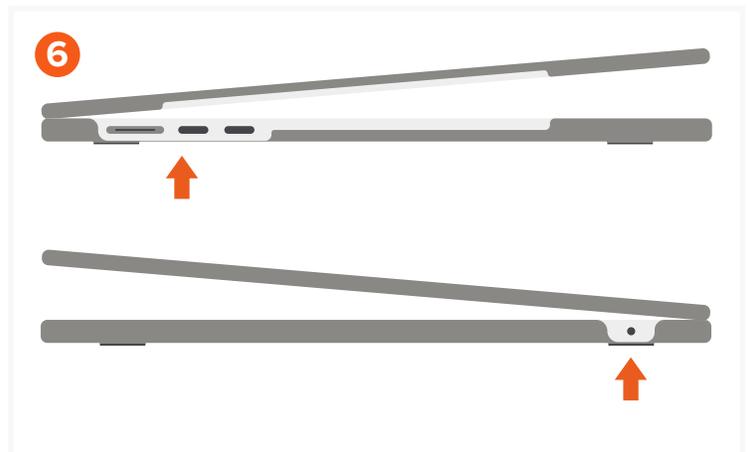

6
Ensure that the cutouts are properly aligned.