



USB-C WIRELESS CHARGING DOCK FOR AIRPODS


1 Plug the Wireless Charging Dock into a powered USB-C port

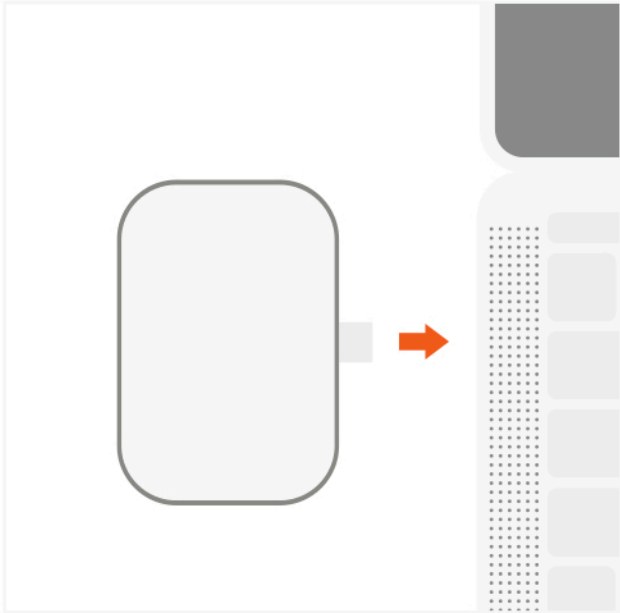

2 Place AirPods onto the charging dock

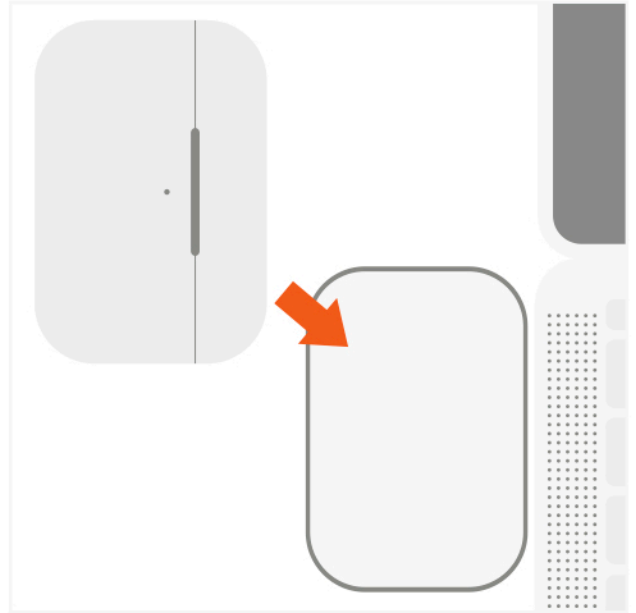

3 The dock's LED light will illuminate to indicate charging

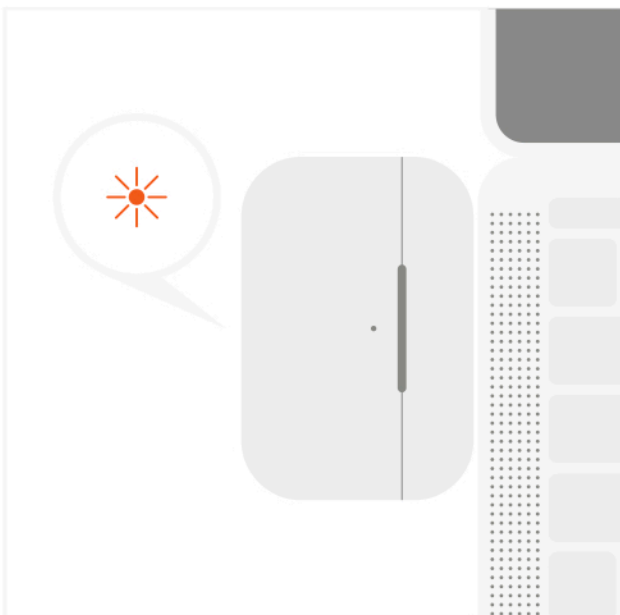

4 Remove AirPods from the charging dock when fully charged

