## INSTRUCTIONAL GUIDE

## TYPE-C HDD ENCLOSURE

- 1 Remove two screws on the bottom side of the Enclosure using the included tool.
- 2 Pull out the inner section of the Enclosure.






3 Attach your 2.5" HDD or SSD to the connector on the inner section.



4 Push inner section with installed HDD or SSD into the case.



5 Secure hard drive position inside the Enclosure with screws.

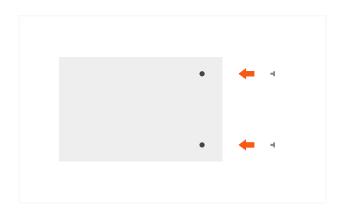

**6** Use the included cable to connect the Enclosure to your Type-C equipped device.

